


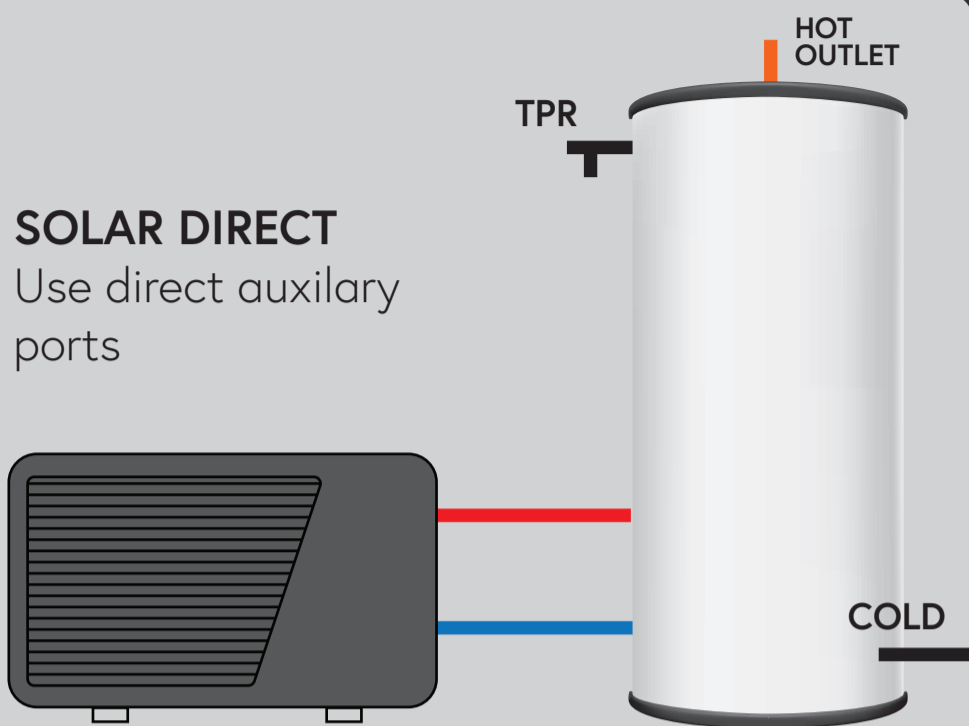


**SOLAR DIRECT**

Use direct auxiliary ports




**DUAL ENTRY**

Use spare cold port on opposite side

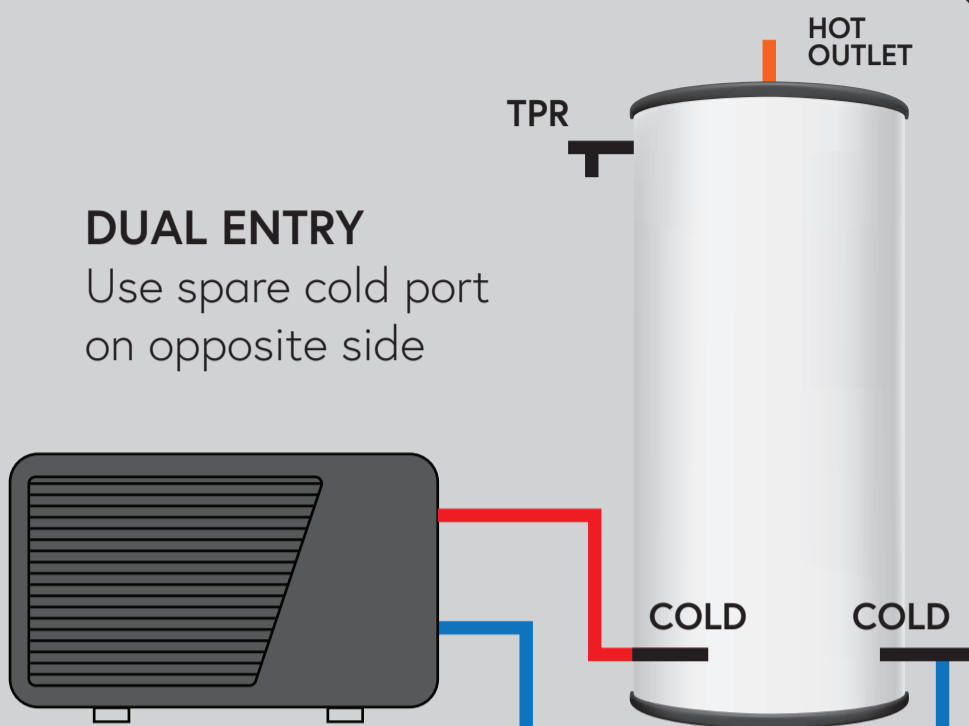


**CONVENTIONAL/  
PROTANK**

Tee across cold & TPR valve port

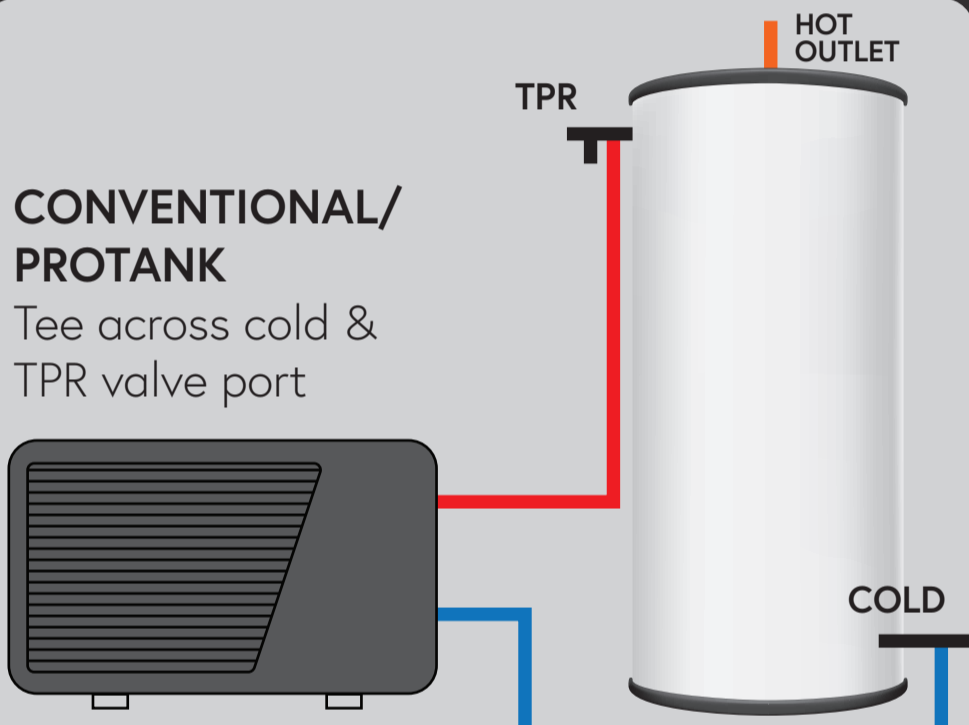

**OLD HWC**

Not recommended

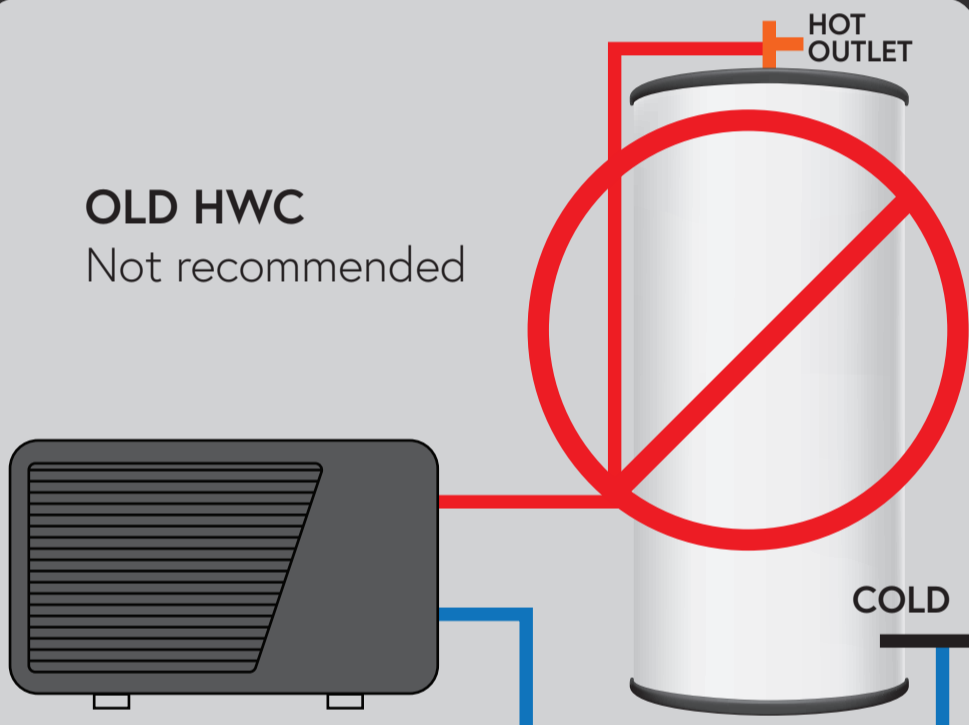

To ensure the Ritter hot water heat pump operates at peak efficiency, we are providing the correct configurations for connecting to hot water cylinders.

This quick guide helps to understand the optimal setup, ensuring seamless integration and reliable performance.

Getting it right the first time and deliver the best results for your customers!

